



1 | **Seat Height Adjustment (Seat Right, Back)**
When standing, lift lever until seat is at desired height.
To reduce height, lift lever while seated.



2 | **Seat Slide Adjustment (Optional - Seat Right, Front)**
While seated, pull lever up and apply forwards or backwards momentum to the seat. To lock position, release lever.



3 | **Backrest Angle Adjustment (Seat Left)**
While seated, twist lever up and apply slight pressure to backrest.
To lock tilt position, twist lever towards floor.



4 | **Arm Height Adjustment (Optional - Arm Outer)**
While seated, adjust height by pressing toggle button to the side of armrest.



The Loop Task Chair is now fully operational

For any further assistance or clarification, please contact sales on +44 (0) 1 405 746000